



It is used when the overlock is mounted in a lowered position (the overlock work table is at the level of the machine top).

+48 697 530 240
+48 61 876 89 46
info@rexelpoland.com

